


Operation

Activate your BEEM

When you switch on the BEEM, it takes up to 30 minutes before the BEEM reaches its full temperature. When switched off, it may take up to 40 minutes before the BEEM has completely cooled down. To activate your BEEM use the remote controle as shown:

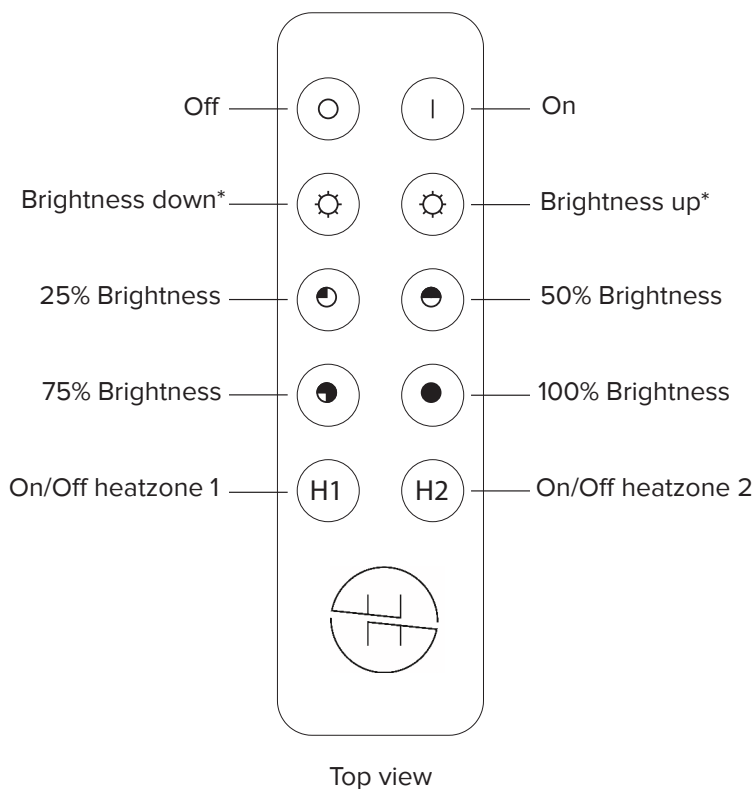

* Hold down these buttons.