


# Remote controle

## Activate your DOME

After the DOME is wired to a suitable power outlet, the DOME may be powered on. The right switch (marked LOW - 0 - HIGH) switches the heater on. On "LOW" only three side elements heat, on "HIGH" all five side elements and the round bottom element are providing heat. "0" switches the heater off. When you switch on the DOME, it takes up to 30 minutes before the DOME reaches its full temperature. When switched off, it may take up to 40 minutes before the DOME has completely cooled down. The left switch (marked DIM - 0 - ON) manually controls the light.

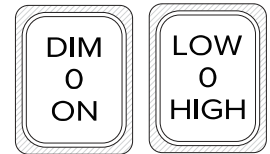

Located on the back of the panel of the base of the DOME.

## "DIM" ENABLES THE REMOTE


Enable the light with remote

## "O" LIGHT OFF

Switch off the light without the remote

## "ON" LIGHT ON

Switch on the light without the remote

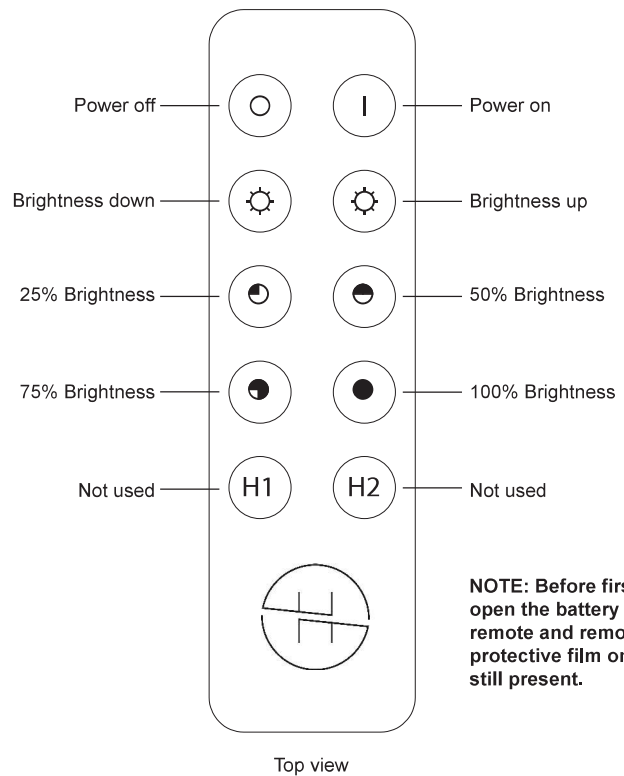

**NOTE:** Before first use, please open the battery cover of the remote and remove the protective film on the battery if still present.