


Operation

Activate your DISC

After the DISC is wired to a suitable power outlet, the DISC may be powered on. The right switch (marked LOW - 0 - HIGH) switches the heater on. On "LOW" only three side elements heat, on "HIGH" all five side elements and the round bottom element are providing heat. "0" switches the heater off. When you switch on the DISC, it takes up to 30 minutes before the DISC reaches its full temperature. When switched off, it may take up to 40 minutes before the DISC has completely cooled down. The left switch (marked DIM - 0 - ON) manually controls the light.

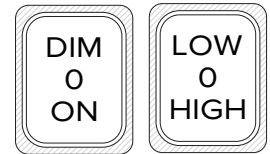

Located on the back of the panel of the base of the DISC.

"DIM" ENABLES THE REMOTE


Enable the light with remote

"0" LIGHT OFF

Switch off the light without the remote

"ON" LIGHT ON

Switch on the light without the remote

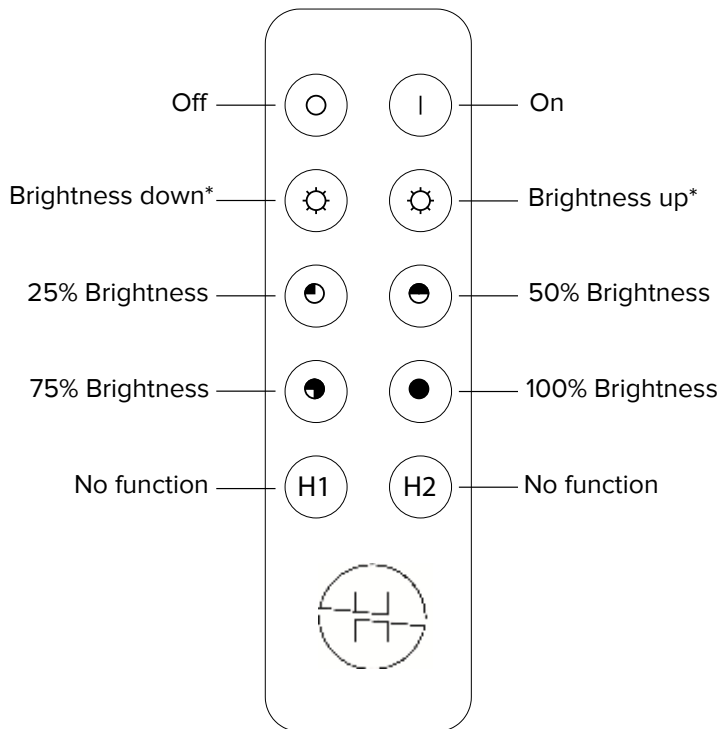

Top view

*Hold down these buttons